





5.

6.

E-Mail: sales@incartec.co.uk Website: www.incartec.co.uk

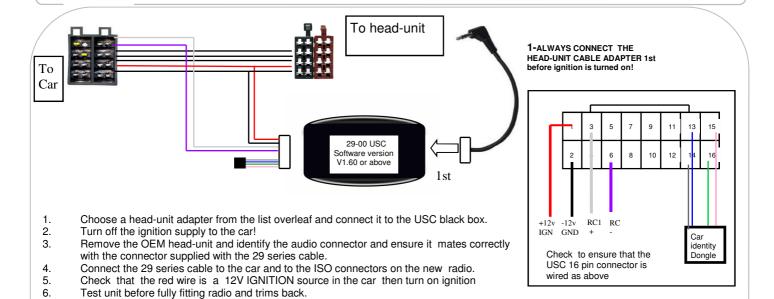

If Problems: Check that correct adapter has been used and links are in the correct place. Always disconnect from the power supply if you change the head-unit adapter lead. Check that Red wire is 12V ignition and not Permanent power. Check that head-unit is earthed and black wire is earth. Check all connections are the same as the wiring diagram shown here

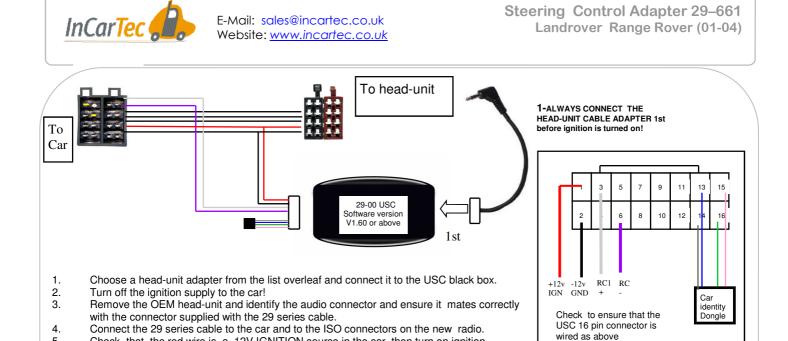

If Problems: Check that correct adapter has been used and links are in the correct place. Always disconnect from the power supply if you change the head-unit adapter lead. Check that Red wire is 12V ignition and not Permanent power. Check that head-unit is earthed and black wire is earth. Check all connections are the same as the wiring diagram shown here

Check that the red wire is a 12V IGNITION source in the car then turn on ignition

Test unit before fully fitting radio and trims back.

## CHOOSE THE CORRECT HEAD-UNIT ADAPTER FROM THOSE BELOW

