





E-Mail: sales@incartec.co.uk Website: www.incartec.co.uk

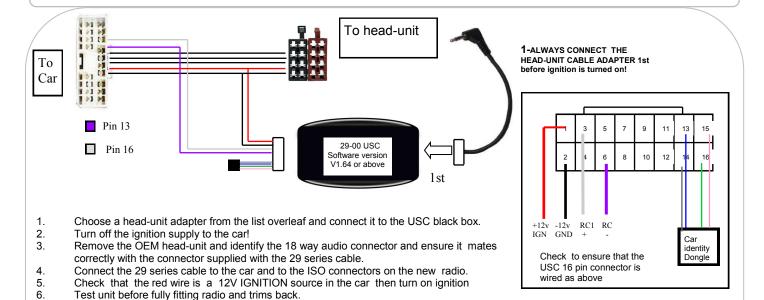

If Problems: Check that correct adapter has been used and links are in the correct place. Always disconnect from the power supply if you change the head-unit adapter lead. Check that Red wire is 12V ignition and not Permanent power. Check that head-unit is earthed and black wire is earth. Check all connections are the same as the wiring diagram shown here

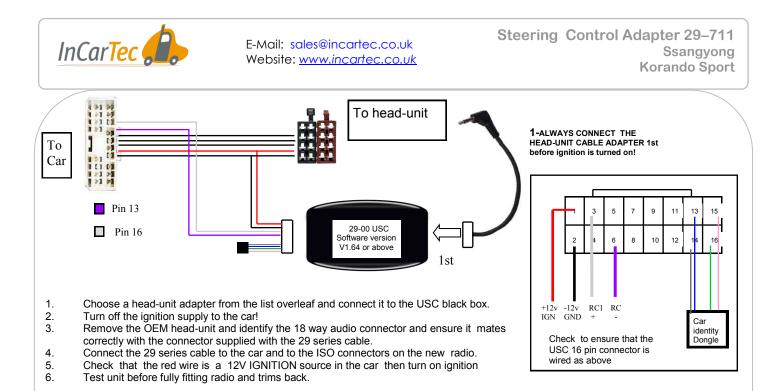

If Problems: Check that correct adapter has been used and links are in the correct place. Always disconnect from the power supply if you change the head-unit adapter lead. Check that Red wire is 12V ignition and not Permanent power. Check that head-unit is earthed and black wire is earth. Check all connections are the same as the wiring diagram shown here

CHOOSE THE CORRECT HEAD-UNIT ADAPTER FROM THOSE BELOW 29-001 Alpine 29-003 Clarion 29-004 JVC 29-002 Blaupunkt 5 5 6 29-005 Kenwood 29-005D Kenwood 29-006 Panasonic 29-006A Panasonic Single wire 4 pin DIN Plug Standard CD units AV head-units 5 29-011 Zenec 29-009 Siemens 29-008 Sony 29-020 Pioneer & 3v & 5v units Sony VDO

Special external drive PCB version

