



## **CONNECTION DIAGRAM**

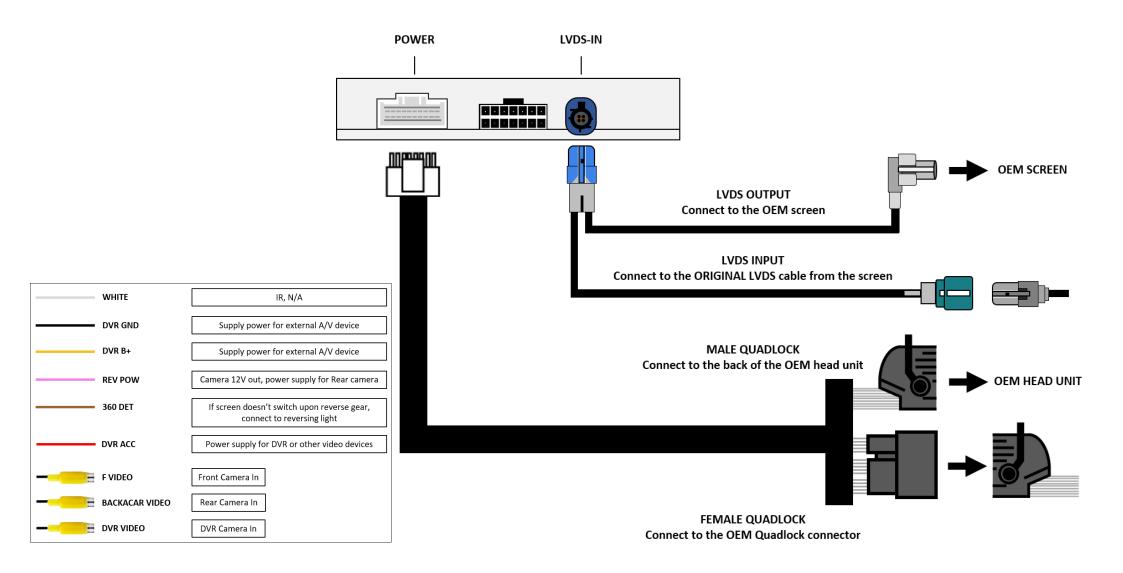



## **DIP SWITCH SETTINGS**

Please disconnect & reconnect interface power after changing any DIP setting

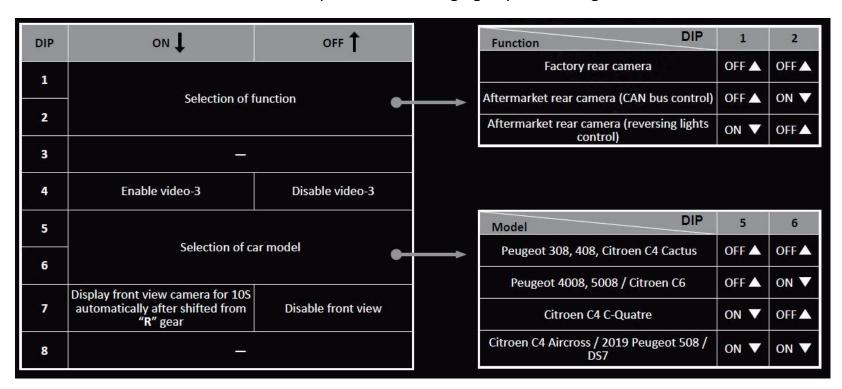



## **DISPLAYING VIDEO -3**

Make sure DIP number 4 is "ON", press and hold the "LIST" button on the steering wheel or "MENU" for 3 Seconds to display external video.