


Website: www.incartec.co.uk E-Mail: sales@incartec.co.uk

27-234 Add camera to Honda OEM 8" and I-MID screen

Installation diagram

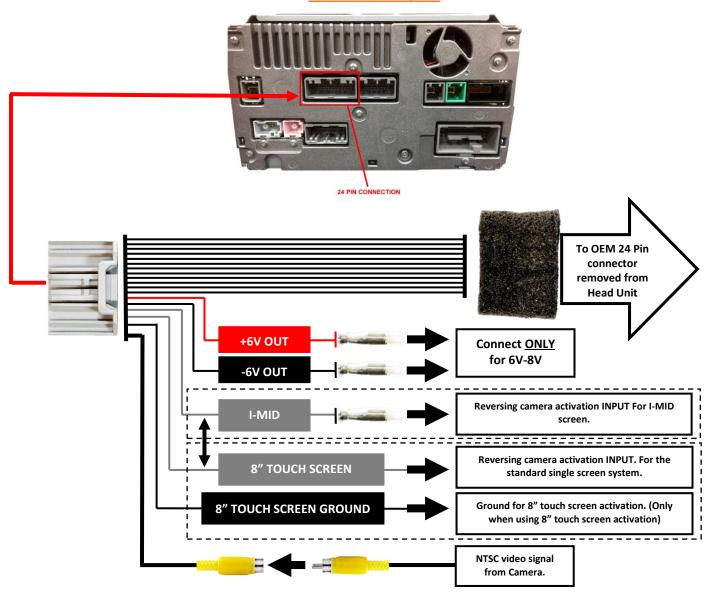

Installation Instructions

- 1. Ensure the vehicle's ignition is off and the key has been removed.
- 2. Remove the original Head Unit with reference to the manufacturer's instructions and connect 27-234 to the vehicle and the Head unit. In some cases, there may not be a connection from the car to the 24-pin connection on the Head Unit. In this case the female 24-pin connector of 27-234 DOES NOT HAVE TO BE CONNECTED TO ANYTHING. Simply just connect the male end of 27-234 to the Head unit and leave the female end loose.
- 3. **Only connect the red and black 8V wires if the camera being used needs an 8V power supply**. If the camera is a 12V camera this will need to be powered by an alternative fused, ignition live 12V power supply from the car.
- 4. connect 27-234 to the reversing input signal with **ONE** of the following options:
- If the vehicle has only the I-MID display (small display displaying radio, clock, mpg etc.) connect the single reverse input signal wire with the bullet connector to a relevant source. This is labelled 'REV'. A typical source would be the reversing lights circuit if there is not a specific connection behind the Head Unit.
- With the Honda 8" touch display system, connect the black and grey wires to a vehicle ground and reversing signal source respectively. This grey wire is labelled 'Reverse 8" touchscreen' and the black 'Ground to activate 8" touchscreen'.
- 5. Test the camera fully before re-installing the Head Unit