


E-Mail: sales@incartec.co.uk Website: www.incartec.co.uk

Steering Control Adapter 29-666

Citroen Relay(06>)

Fiat Ducato (06>), Peugeot Boxer (06>)

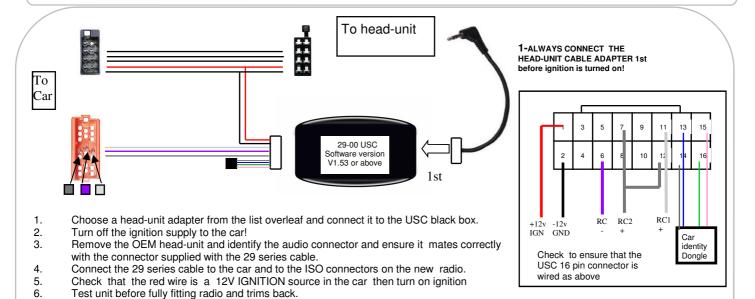

If Problems: Check that correct adapter has been used and links are in the correct place. Always disconnect from the power supply if you change the head-unit adapter lead. Check that Red wire is 12V ignition and not Permanent power. Check that head-unit is earthed and black wire is earth. Check all connections are the same as the wiring diagram shown here




6.

E-Mail: sales@incartec.co.uk Website: www.incartec.co.uk

Steering Control Adapter 29-666

Citroen Relay(06>)

Fiat Ducato (06>), Peugeot Boxer (06>)

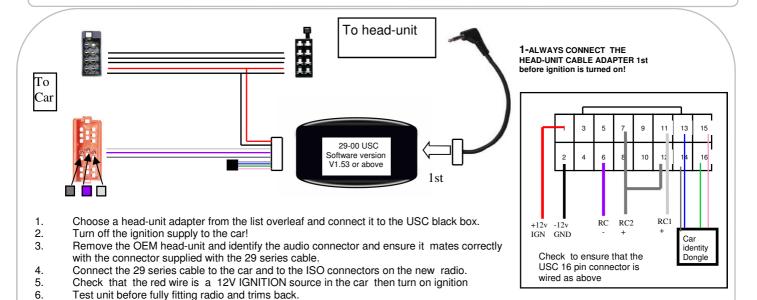

If Problems: Check that correct adapter has been used and links are in the correct place. Always disconnect from the power supply if you change the head-unit adapter lead. Check that Red wire is 12V ignition and not Permanent power. Check that head-unit is earthed and black wire is earth. Check all connections are the same as the wiring diagram shown here

CHOOSE THE CORRECT HEAD-UNIT ADAPTER FROM THOSE BELOW

